

This is a sample manual



Goto:

dubmanuals.com

to download the complete manual

Note, the Table of Contents links
may not function in this sample

1990 Jetta

Volkswagen
Owner's
Manual



INSTRUMENT PANEL

| | |
|---|---|
| Illustration instruments and controls . . . | 4 |
| Warning and indicator light symbols . . . | 6 |

CONTROLS AND EQUIPMENT

| | |
|---|--------|
| Keys, central locking system | 7, 8 |
| Doors, rear lid | 10, 11 |
| Windows, mirrors | 12, 13 |
| Safety belts, head restraints | 14, 23 |
| Seats, armrest console | 24, 25 |
| Ski sack, luggage compartment | 26, 27 |
| Filler panel, pedals | 27 |
| Brakes | 28 |
| Manual transmission | 31 |
| Automatic transmission | 32 |
| Height adjustable steering wheel | 36 |
| Steering lock/ignition/starter switch | 37 |
| Starting procedures | 38 |
| Instrument cluster | 40 |
| Warning/indicator lights | 44 |
| Switches | 48 |
| Light switch, emergency flasher | 48, 49 |
| Turn signals, cruise control | 50, 51 |
| Windshield wipers | 52 |
| Ventilation/heating | 53 |
| Air conditioning | 56 |
| Sliding roof, interior lights | 60 |
| Cigarette lighter, ashtrays | 61 |
| Roof rack | 64 |

VEHICLE OPERATION

| | |
|---|----|
| Break-in period – and afterwards | 65 |
| Operate your vehicle safely | 66 |
| Operate your vehicle economically and minimize pollution | 68 |
| Trailer towing | 69 |

VEHICLE CARE

| | |
|---|--------|
| Fuel tank, fuel supply | 71, 72 |
| Vehicle care (exterior/interior) | 76 |
| Maintenance, inspection intervals | 82 |
| Engine hood | 84 |
| Engine compartment | 85 |
| Lubricants, engine oil | 86, 87 |
| Engine oil filter, fuel filter | 90 |
| Water separator/fuel filter | 91 |
| Transmission oil | 92 |
| Air cleaner, fresh air filter | 93 |
| Power steering | 94 |
| Cooling system | 95 |
| V-belt, brake fluid | 97, 98 |
| Battery | 99 |
| Windshield washer | 102 |
| Wipers blades | 103 |
| Tires/wheels | 104 |
| Difficult operating conditions | 110 |
| Winter driving | 111 |
| Accessories | 112 |

DO-IT-YOURSELF SERVICE

| | |
|-------------------------------|-----|
| Jack and tools | 113 |
| Compact spare wheel | 114 |
| Changing a wheel | 115 |

| | |
|--|----------|
| Fuses, bulbs | 118, 120 |
| Adjusting headlights | 123 |
| Installing/replacing the radio | 124 |
| Emergency starting | 125 |
| Emergency towing | 127 |
| Lifting vehicle | 128 |

TECHNICAL DESCRIPTION

| | |
|--|-----|
| Engine | 129 |
| Emission control system | 130 |
| Transmission | 132 |
| Steering, suspension, brakes, body, chassis | 132 |

TECHNICAL DATA

| | |
|----------------------------------|-----|
| Engine | 133 |
| V-belts, spark plugs | 134 |
| Capacities, dimensions | 135 |
| Weights | 136 |
| Vehicle identification | 137 |

CONSUMER INFORMATION

| | |
|---------------------------|-----|
| Service manuals | 138 |
|---------------------------|-----|

GAS STATION INFORMATION

| | |
|--|-----|
| Location of servicing points | 142 |
|--|-----|

ALPHABETICAL INDEX