

This is a sample manual



Goto:

dubmanuals.com

to download the complete manual

Note, the Table of Contents links
may not function in this sample

Owner's Manual

1993 *Golf* III



INSTRUMENT PANEL

| | |
|--|---|
| Illustration instruments and controls..... | 4 |
| Warning and indicator light symbols..... | 6 |

CONTROLS AND EQUIPMENT

| | |
|--|--------|
| Keys..... | 7 |
| Anti-theft alarm system..... | 8 |
| Doors, rear lid..... | 9, 10 |
| Windows, mirrors..... | 10, 11 |
| Safety belts, child safety..... | 12, 20 |
| Front seats, head restraints..... | 24, 30 |
| Luggage compartment..... | 33 |
| Filler panel, pedals..... | 33 |
| Front seats, brakes..... | 34 |
| Manual transmission..... | 37 |
| Automatic transmission..... | 38 |
| Steering lock/ignition/starter switch..... | 44 |
| Starting procedures..... | 45 |
| Instrument cluster..... | 47 |
| Warning/indicator lights..... | 50 |
| Switches..... | 54 |
| Turn signals, cruise control..... | 55, 56 |
| Wiper and washer system..... | 57 |
| Ventilation/heating..... | 58 |
| Air conditioning..... | 58 |
| Sunroof, interior lights..... | 63, 64 |
| Roof rack..... | 68 |

VEHICLE OPERATION

| | |
|---|----|
| The first 1,000 miles and afterwards... | 69 |
|---|----|

| | |
|---|----|
| Operate your vehicle safely..... | 70 |
| Operate your vehicle economically and minimize pollution..... | 71 |
| Trailer towing..... | 73 |

VEHICLE CARE

| | |
|--|----------|
| Fuel tank, fuel supply..... | 76, 77 |
| Cleaning and protection..... | 81 |
| Maintenance..... | 88 |
| Engine hood..... | 90 |
| Engine compartment..... | 91 |
| Engine oil, oil filter..... | 92, 95 |
| Transmission fluids..... | 97 |
| Power steering..... | 98 |
| Cooling system..... | 99 |
| Brake fluid, battery..... | 102, 103 |
| Windshield washer fluid container..... | 106 |
| Replacing wiper blades..... | 107 |
| Tires/wheels..... | 108 |
| Difficult operating conditions..... | 115 |
| Winter driving..... | 116 |
| Additional accessories..... | 117 |

DO-IT-YOURSELF SERVICE

| | |
|-------------------------------------|----------|
| Jack and tools..... | 118 |
| Compact spare wheel..... | 119 |
| Changing a wheel..... | 120 |
| Fuses, bulbs..... | 123, 125 |
| Installing/replacing the radio..... | 129 |
| Emergency starting..... | 130 |
| Emergency towing..... | 132 |
| Lifting vehicle..... | 134 |

TECHNICAL DESCRIPTION

| | |
|--|-----|
| Engine..... | 135 |
| Emission control system..... | 136 |
| Transmission..... | 138 |
| Steering, suspension, brakes, body, chassis..... | 138 |

TECHNICAL DATA

| | |
|--------------------------------|-----|
| Engine data..... | 139 |
| Poly V-belts, spark plugs..... | 140 |
| Capacities, dimensions..... | 141 |
| Weights..... | 142 |
| Vehicle identification..... | 143 |

CONSUMER INFORMATION

| | |
|----------------------|-----|
| Service manuals..... | 144 |
|----------------------|-----|

GAS STATION INFORMATION

| | |
|-----------------------------------|-----|
| Location of servicing points..... | 148 |
|-----------------------------------|-----|

SUPPLEMENTAL INFORMATION 149

ALPHABETICAL INDEX 151